

PAT-TRAP WOBBLE

The PAT-TRAP w/WOBBLE can be used in any of the following modes:

- Stationary
 - singles
 - doubles
- Oscillating horizontal
 - singles
 - doubles
- Oscillating vertical
 - singles
 - doubles
- Oscillating horizontal/vertical
 - singles
 - doubles

The PAT-TRAP w/WOBBLE has an interrupter for the horizontal and vertical modes.

NOTE: If the machine is located inside a trap house, oscillating doubles targets may hit the trap house walls.

CHANGE OVER TO WOBBLE

Stand clear of the trap machine. Release the target. Use all safety procedures as stated in the previous "SINGLES" and "DOUBLES" section of this Manual

The OSCILLATION SWITCH and the WOBBLES SWITCH must be pushed down to the AUTO position on the trap machine electrical box. This engages the machine to the automatic horizontal/vertical oscillation mode.

HEIGHT ADJUSTMENT

On the trap machine electrical box, the horizontal switch must be moved to the MANUAL position. For desired height, push UP switch to go up: push DOWN switch to go down.